

220V



AUX 3

CH. 10


CH. 1-9



AUX 6

CH. 11

220V

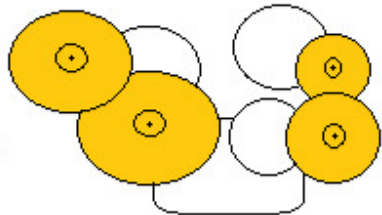

CH. 12

220V

CH.13-14

CH. 29 CH. 30 CH. 31 CH. 32

MUSIC STAND MUSIC STAND MUSIC STAND MUSIC STAND

TRUMPET'S RISER 6m X 2m ( 1m HEIGHT )



AUX 5

CH. 25 CH. 26 CH. 27 CH. 28

MUSIC STAND MUSIC STAND MUSIC STAND MUSIC STAND

TROMBONE'S RISER 6m X 2m ( 0,5m HEIGHT )



AUX 5

220V

CH. 15-16

CH. 13-14



CH. 17



CH. 18



CH. 19



AUX 2



AUX 1



AUX 4



AUX 4

CONDUCTOR



CH. 20



CH. 21



CH. 22



CH. 23



CH. 24

MUSIC STAND

MUSIC STAND

MUSIC STAND

MUSIC STAND

MUSIC STAND

CH.	INSTRUMENT	MICROPHONE	INSERT	GROUP	STAND
1	KICK	BETA 52 / D112 / D6 / E902	GATE (opt.)	G1-G2 /w COMP. - LIM.	SMALL
2	SNARE	SM57	GATE (opt.)	G1-G2 /w COMP. - LIM.	CLIP or SMALL
3	HI-HAT	C391 / NT5 / SM81 / KM184	/	G1-G2 /w COMP. - LIM.	NORMAL
4	TOM 1	E904 / E604 / SM57	GATE (opt.)	G1-G2 /w COMP. - LIM.	CLIP or NORMAL
5	TOM 2	E904 / E604 / SM57	GATE (opt.)	G1-G2 /w COMP. - LIM.	CLIP or NORMAL
6	TOM 3	E904 / E604 / SM57	GATE (opt.)	G1-G2 /w COMP. - LIM.	CLIP or SMALL
7	TOM 4	E904 / E604 / SM57	GATE (opt.)	G1-G2 /w COMP. - LIM.	CLIP or SMALL
8	OVER L	C414 / C391 / NT5 / SM 81 / KM184	/	G1-G2 /w COMP. - LIM.	NORMAL /w TELESCOPIC BOOM
9	OVER R	C414 / C391 / NT5 / SM 81 / KM184	/	G1-G2 /w COMP. - LIM.	NORMAL /w TELESCOPIC BOOM
10	PERC	C414 / C391 / NT5 / SM 81 / KM184	/	G1-G2 /w COMP. - LIM.	NORMAL /w TELESCOPIC BOOM
11	BASS	D.I.	COMP. - LIM.	G1-G2 /w COMP. - LIM.	/
12	GUIT	E906 / SM57	/	G1-G2 /w COMP. - LIM.	SMALL
13	KEYBOARD 2/L	D.I.	/	G1-G2 /w COMP. - LIM.	/
14	KEYBOARD 2/R	D.I.	/	G1-G2 /w COMP. - LIM.	/
15	KEYBOARD 1/L	D.I.	/	G1-G2 /w COMP. - LIM.	/
16	KEYBOARD 1/R	D.I.	/	G1-G2 /w COMP. - LIM.	/
17	SOLO/SPEECH MIC	SM 58 / BETA 58	COMP. - LIM.	G3-G4 /w COMP. - LIM.	NORMAL
18	MALE VOCAL	BETA 87 / BETA 58 / SM 58	COMP. - LIM.	G3-G4 /w COMP. - LIM.	NORMAL
19	FEMALE VOCAL	BETA 87 / BETA 58 / SM 58	COMP. - LIM.	G3-G4 /w COMP. - LIM.	NORMAL
20	SAX BARITONE	RE20 / BETA 58 / SM 58 / SM 57	/	G5-G6 /w COMP. - LIM.	NORMAL /w TELESCOPIC BOOM
21	SAX ALTO 2	RE20 / BETA 58 / SM 58 / SM 57	/	G5-G6 /w COMP. - LIM.	NORMAL /w TELESCOPIC BOOM
22	SAX ALTO 1	RE20 / BETA 58 / SM 58 / SM 57	/	G5-G6 /w COMP. - LIM.	NORMAL /w TELESCOPIC BOOM
23	SAX TENOR 1	RE20 / BETA 58 / SM 58 / SM 57	/	G5-G6 /w COMP. - LIM.	NORMAL /w TELESCOPIC BOOM
24	SAX TENOR 2	RE20 / BETA 58 / SM 58 / SM 57	/	G5-G6 /w COMP. - LIM.	NORMAL /w TELESCOPIC BOOM
25	TROMBONE 2	RE20 / BETA 58 / SM 58 / SM 57	/	G7-G8 /w COMP. - LIM.	NORMAL (ON THE RIGHT SIDE OF STAND)
26	TROMBONE 1	RE20 / BETA 58 / SM 58 / SM 57	/	G7-G8 /w COMP. - LIM.	NORMAL (ON THE RIGHT SIDE OF STAND)
27	TROMBONE 3	RE20 / BETA 58 / SM 58 / SM 57	/	G7-G8 /w COMP. - LIM.	NORMAL (ON THE RIGHT SIDE OF STAND)
28	TROMBONE 4	RE20 / BETA 58 / SM 58 / SM 57	/	G7-G8 /w COMP. - LIM.	NORMAL (ON THE RIGHT SIDE OF STAND)
29	TRUMPET 2	RE20 / BETA 58 / SM 58 / SM 57	/	G7-G8 /w COMP. - LIM.	NORMAL
30	TRUMPET 1	RE20 / BETA 58 / SM 58 / SM 57	/	G7-G8 /w COMP. - LIM.	NORMAL
31	TRUMPET 3	RE20 / BETA 58 / SM 58 / SM 57	/	G7-G8 /w COMP. - LIM.	NORMAL
32	TRUMPET 4	RE20 / BETA 58 / SM 58 / SM 57	/	G7-G8 /w COMP. - LIM.	NORMAL